

CONGRATULATIONS!

You just purchased one of the most advanced Optimist masts available worldwide.

This rigging pack contains:

- 2x nylon top pins (1)
- 1x Windesign low friction windindicator (2)
- 1x halyard with Harken ball bearing hook-in block and Windesign low friction ring (3)
- 1x 4mm Vectran halyard line (4)
- 1x halyard handle (5)
- 1x mastsleeve (6)

* Fig.1 shows what the rigging pack contains

THE FASTENING OF THE SAIL

The fastening of a sail to a BLACKGOLD mast needs only to be done once:

- 1) Tie the upper double loop from the 2.2mm tack line* through the top pin and the sail.
- 2) Adjust the lower single loop from the 2.2mm tack line* in such a way that the sail measurement band does not surpass the top measurement band on the mast.

* Tack lines not included

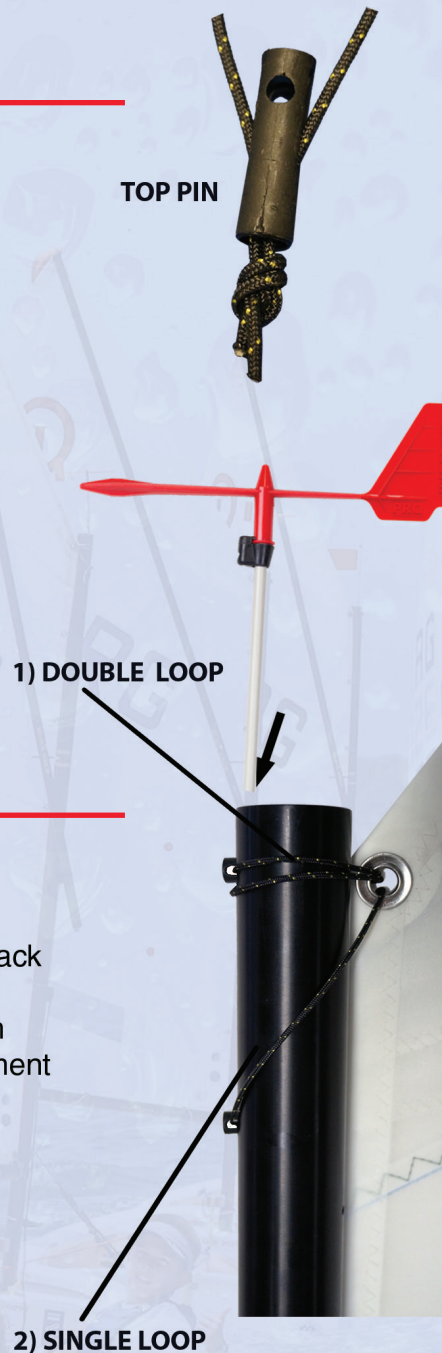


Fig. 1



WWW.OPTIPARTS.COM

OPTIPARTS
MARINE EQUIPMENT

MOUNTING THE HALYARD BLOCKS

- 1) Hook the Harken ball bearing block into the mast
- 2) Attach the Vectran halyard line to the halyard cleat
- 3) Pull the Vectran halyard line through the Windesign low friction ring
- 4) Pull the Vectran halyard line back through the cleat
- 5) Pull the sprit end point through the Dyneema loop*

* Make sure you place the sprit on the starboard side of the mast, not on the port side



1)



2)



3)



4)



5)

NOTICE

If your boat has a larger Optimax deck collar, for masts with a sleeve, you can mount a sleeve on the mast. If your boat does not have a deck collar for masts with a sleeve, you can use the mast without the sleeve or mount a new Optimax deck collar in your boat. We recommend using the Optimax deck collar to prevent wear and minimise friction between mast and deck collar.

MOUNTING THE SLEEVE

You will notice the sleeve is slightly smaller than the mast. To mount the sleeve you should gently warm the sleeve with a hairdryer or paint stripper. You can then easily slide the warm sleeve over the mast into position.



215 MM

OPTIPARTS
BLOCKS



WWW.OPTIPARTS.COM

OPTIPARTS
MARINE EQUIPMENT