


**STYLE
PL-259-CP-G
for RG-8X &
RG-58/AU Coax**

**Installation
Instructions**

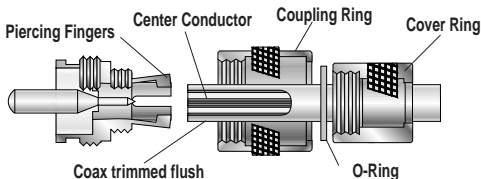

1. Cut the coax clean and flush. Slide cover ring, O-ring and larger coupling ring onto cable, threads facing connector. RG-58 only: place nylon adapter over end of coax.
2. Push coax into the connector. Be sure connector's center pin penetrates the center conductor.
3. Using pliers, carefully and evenly squeeze opposite pairs of the piercing fingers (on the knurled points) through the coax's outer jacket and into the shield.
4. Slide O-ring up to the piercing fingers, tighten cover ring over fingers and screw the larger coupling ring onto the connector body.

U.S. Patents Re.36,700 /6,062,897 /6,123,567
International Patents & Patents Pending
Centerpin is a registered trademark of
Centerpin Technology, Inc.